


HOTRACO HELPS

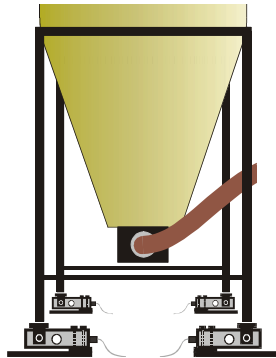

Silo weighing


Hotraco Agri BV

Stationsstraat 142, NL - 5963 AC Hegelsom, P.O. Box 6086, 5960 AB Horst, The Netherlands
Tel: +31 (0)77 3275020 Fax: +31 (0)77 3275021 Internet: www.hotraco.com

General

Silo weighing can be applied when using a Sirius-SWS or an Orion-P computer. When using the Orion-P, you need an additional CAN-IO-LCA. The amount of feed that is consumed is determined by the decreasing silo weight. Multiple silo configurations are possible.

A feed delivery button can be placed near the silo(s). The feed supplier pushes the button when feed is delivered in order to prevent inaccurate silo weighing.

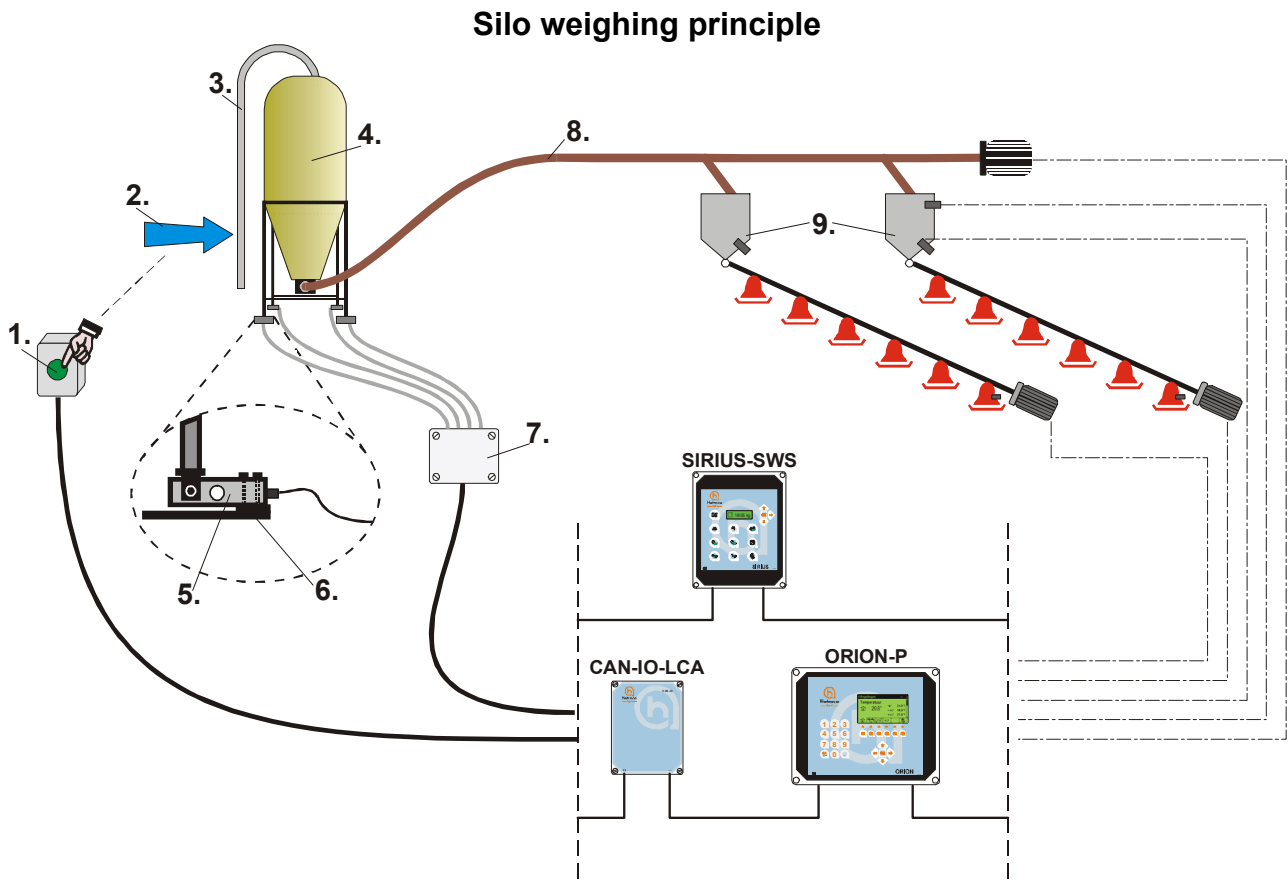

- | | |
|----------------------------------|--------------------------|
| 1. Feed delivery button (FD-SWS) | 6. Loadcell support |
| 2. Feed supply | 7. Junction box (JB-SWS) |
| 3. Silo filling | 8. Cross auger |
| 4. Silo | 9. Hoppers |
| 5. Load cell | |